


# **FIFOTRACK COMMAND LIST**

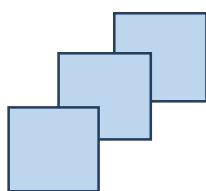

Model: S30  
Version: V1.1  
[www.fifotrack.com](http://www.fifotrack.com)

## Copyright and Disclaimer

- ◎ All copyrights belong to Shenzhen fifotrack Solution Co., Ltd. You are not allowed to revise, copy or spread this file in any form without consent of fifotrack.
- ◎  is trademark of fifotrack, protected by law.
- ◎ Please read this user guide carefully before installation to avoid any possible personal injury or property loss.

## Document History

Version	Revision Date	Author	Detail
V1.1	Jan 3, 2018	Vito Hu	Revision Version

## Contents

<b>Document History .....</b>	<b>3</b>
<b>1 GPRS Command Format .....</b>	<b>6</b>
<b>2 SMS Command Format.....</b>	<b>7</b>
<b>3 Serial port (COM) Command Format .....</b>	<b>8</b>
<b>4 Command Writing Specification .....</b>	<b>9</b>
<b>5 Command List .....</b>	<b>10</b>
B00 – Setting GPRS Parameters.....	10
B01 – Setting GPRS APN Parameters .....	10
B02 – Setting GPRS Link Protocol .....	11
B03 – Setting Tracking Time Interval.....	11
B04 – Setting Roaming Tracking Time Interval .....	11
B05 – Setting Distance Tracking Interval .....	12
B07 – Setting the Direction Change Upload .....	12
B08 – Setting Speeding Alarm .....	13
B10 – Setting SMS Password .....	13
B11 – Setting SOS Number .....	13
B12 – Output Control .....	14
B13 – Pulse Output Control.....	14
B14 – Setting SMS Time Zone .....	15
B15 – Setting Sleep Mode .....	15
B16 – Setting Initial Mileage.....	15
B17 – Clear Blind Data .....	16
B18 – Setting in-port Working Mode.....	16
B19 – Setting Circle geo-fence.....	17
B21 – Setting Fatigue Driving .....	17
B22 – Setting Maximum Parking Time .....	18
B23 – Setting Alarm Action.....	18
B26 – Setting Alarm SMS Head String .....	19
B27 – Setting Parameters of Harsh Acceleration Alarm .....	19
B28 – Setting Parameters of Harsh Braking Alarm .....	19
B29 – Setting Sensitivity of Motion Sensor .....	20

B31 – Setting SOS Number Attribute.....	20
B33 – Setting Maximum Idle Time .....	21
B37 – Setting Digital Temperature Number.....	21
B38 – Setting High/Low Temperature Alarm.....	22
B39 – Delete Digital Temperature Sensor.....	23
B40 – Retrieve Temperature Sensor Data.....	23
B42 – Authorizing iButton Tag(s) .....	23
B43 – Delete Authorized iButton Tag(s).....	24
B44 – Retrieve iButton Tag(s) Authorization .....	25
B80 – Setting Fuel Theft/Filling Alarm.....	25
B81 – Setting Fuel Level Alarm .....	26
B82 – Enable/Disable Fuel Consumption Statistics .....	26
B90 – Reset Tracker or Module.....	27
B91 – Setting Parameters to Default .....	27
B94 – Turn on/off LED Display .....	28
B98 – Setting Lower Power Parameters .....	28
C01 – Retrieve Position Information.....	29
C02 – Retrieve Firmware/Hardware Version, SN, IMEI .....	30
C03 – Retrieve Supply Power Status.....	30
C04 – Retrieve Parameter Setting .....	30
C06 – Retrieve Basic Information of Tracker.....	30
<b>Appendix A – Alarm code and alarm parameter.....</b>	<b>32</b>

# 1 GPRS Command Format

**GPRS uplink (i.e.: Data is sent from terminal to platform) command format:**

\$\$<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>\*<checksum>\r\n

**GPRS downlink (i.e.: Data is sent form platform to terminal) command format:**

##<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>\*<checksum>\r\n

## Remarks:

- ◎ Comma (,) is used to separate data field, and it is necessary. There is no space before or after comma.
- ◎ pack-len: Package Length, decimal string format, the field of pack-len is {<ID>,<work-no>,<cmd-code>,<cmd-para>}, be careful, comma(,) in front of ID included.
- ◎ ID: Terminal ID, default IMEI.
- ◎ work-no: working number, hexadecimal string format, cyclic accumulation from 1 to 0xFFFF.
- ◎ cmd-code: Command code, or specification of data type.
- ◎ cmd-para: parameter or description of cmd-code, which is described in the following chapter.
- ◎ checksum: checksum of package, 2 bytes hexadecimal string format, XOR of {<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>}.
- ◎ \r\n: End of package, i.e. <CR><LF>.
- ◎ Without specification, multi-byte binary data in cmd-para uses big endian format, i.e. Most Significant Byte first.

## 2 SMS Command Format

**Sending SMS (from mobile to tracker) command format:**

<password>,<cmd-code>,<cmd-para>

**Reply SMS (from tracker to mobile) data format:**

<cmd-code>,<proc-result>

01 password: SMS password, 6 digits, default “000000”.

02 cmd-code: command code, the same as cmd-code filed in GPRS command.

03 cmd-para: command parameter, the same as cmd-para filed in GPRS command.

04 proc-result: command process result

OK – Succeed.

05 SMS command with invalid password, or with incorrect format, no reply will be sent.

## 3 Serial port (COM) Command Format

### **Setting command format:**

#<cmd-code>,<cmd-para><CR><LF>

### **Reply data format:**

#<cmd-code>,<proc-result><CR><LF>

cmd-code, cmd-para: the same as corresponding filed of GPRS/SMS command.

proc-result: SMS command procession result

OK – Succeed.

UNSUPPORT – Command not supported.

FAILED –Procession failed.

## 4 Command Writing Specification

- ◎ Comma (,) is used to separate multi-filed, there is no space before and after comma.
- ◎ For command with multi parameters, filed(s) can be empty, the corresponding parameter is set to default.
- ◎ The following chapters describe *cmd-code* and *cmd-para*.
- ◎ The “Retrieve” row in the following chapters describes the corresponding query command.

## 5 Command List

B00 – Setting GPRS Parameters	
Source	GPRS/COM/SMS
Description	<p>B00,&lt;svr_type&gt;,&lt;net_addr&gt;,&lt;net_port&gt;</p> <p>01 svr_type: server selection, 1--main server, 2--backup server; When the connection to main server cannot be reached, tracker will automatically connect to the backup server. This avoids data losses.</p> <p>02 net_addr: server IP or domain.</p> <p>03 net_port: server port.</p>
Reply	<p>B00,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B00,1, 47.88.35.165,10502</p> <p>01 Set main server: IP-47.88.35.165, port-10502.</p>
Retrieve	<p>C04,B00,&lt;svr_type&gt;</p> <p>01 svr_type: server selection, the same as <u>svr_type</u> field in setting command.</p>

B01 – Setting GPRS APN Parameters	
Source	GPRS/COM/SMS
Description	<p>B01,&lt;apn_name&gt;,&lt;apn_usr&gt;,&lt;apn_pwd&gt;</p> <p>01 apn_name: APN name.</p> <p>02 apn_usr: APN user name.</p> <p>03 apn_pwd: APN password.</p> <p>04 Leave <u>apn_usr</u>, <u>apn_pwd</u> field empty, if no APN username and APN password exist.</p> <p>05 Contact to local ISP for APN detail.</p>
Reply	<p>B01,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B01,cmnet</p> <p>01 Set APN name to “cmnet”, APN login username and password empty.</p>
Retrieve	C04,B01

## B02 – Setting GPRS Link Protocol

Source	GPRS/COM/SMS
Description	B02,<link_type> 01 link_type: Link protocol, value TCP or UDP. 02 default TCP protocol.
Reply	B02,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B02,TCP 01 Set link protocol to TCP.
Retrieve	C04,B02

## B03 – Setting Tracking Time Interval

Source	GPRS/COM/SMS
Description	B03,<basic_tmr>,<accoff_tmr>,<parking_tmr> 01 basic_tmr: normal time interval, unit s. 02 accoff_tmr: time interval when ACC OFF, unit s, default 0s. 03 parking_tmr: time interval when parking, unit s, default 0s. 04 When ACC is connected, tracker uses <i>accoff tmr</i> priority, <i>parking tmr</i> is ignored.
Reply	B03,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B03,30 01 Set timing tracking interval to 30s, tracker uploads position data every 30s.
Retrieve	C04,B03

## B04 – Setting Roaming Tracking Time Interval

Source	GPRS/COM/SMS
Description	B04,<roam_tmr> 01 roam_tmr: roaming time interval, unit s, default 0s. 02 When both B03 and B04 are set, tracker uses <i>basic tmr</i> and <i>roam tmr</i> for data uploading under different network condition, <i>accoff tmr</i> and <i>parking tmr</i> are ignored.
Reply	B04,<err_code> 01 err_code: procession error code.

	<p>OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.</p>
Example	B04,3600 01 Set timing tracking interval to 3600s while roaming.
Retrieve	C04,B04

## B05 – Setting Distance Tracking Interval

Source	GPRS/COM/SMS
Description	B05,<basic_dst> 01 basic_dst: Distance tracking interval, unit meter. 02 Distance Tracking is independent from timing tracking.
Reply	B05,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B05,100 01 Set distance tracking to 100m.
Retrieve	C04,B05

## B07 – Setting the Direction Change Upload

Source	GPRS/COM/SMS
Description	B07,<course> 01 course: direction change angle, unit degree, range 1--359, default 0. 02 When <u>course</u> is set to 0, direction change upload is disabled. 03 When driving direction change exceeds the setting value, tracker will upload a position data for supplement.
Reply	B07,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B07,30 01 Set direction change angle to 30°.
Retrieve	C04,B07

## B08 – Setting Speeding Alarm

Source	GPRS/COM/SMS
Description	B08,<speeding> 01 speeding: speed, unit km/h, range 0--300, default 0. 02 When parameter is set to 0, speeding alarm is disabled.
Reply	B08,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B08,90 01 Set speed limit to 90km/h.
Retrieve	C04,B08

## B10 – Setting SMS Password

Source	GPRS/COM/SMS
Description	B10,<sms_pwd> 01 sms_pwd: SMS password, 6 digits, default “000000”.
Reply	B10,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B10,472627 01 Set SMS password to “472627”.  B10,47262A 01 Invalid command, because SMS password needs to be a 6 digits string.
Retrieve	C04,B10

## B11 – Setting SOS Number

Source	GPRS/COM/SMS
Description	B11,<sos_num1>,<sos_num2>,<sos_num3> 01 sos_num1, 2, 3: SOS numbers to be set; 3 numbers can be set at most. 02 Refer to B23 for the function of SOS number(s).
Reply	B11,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported.

	FAILED – Procession failed.
Example	B11,15698210011,,15698210200 01 Set sos_num1 to 15698210011, sos_num2 to empty, sos_num3 to 15698210200.
Retrieve	C04,B11

## B12 – Output Control

Source	GPRS/COM/SMS
Description	B12,<index>,<action>,<safe_speed> 01 index: out port selection, value 1, 2, 3... etc.. 02 action: Output control, 0--output low level, 1—output high level. 03 safe_speed: speed limit, unit km/h, range 1—300; when this parameter is set to 0, or this filed is empty, output control takes effect immediately; Other value, set the speed limit for output control. When the driving speed is lower than the speed limit, the output control takes effect.
Reply	B12,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B12,1,1,20 01 Set OUT1 to output high level when speed less than 20km/h.
Retrieve	UNSUPPORT

## B13 – Pulse Output Control

Source	GPRS/COM/SMS
Description	B13,<index>,<on_time>,<off_time>,<pls_cnt> 01 index: out port specification, value 1, 2, 3... etc.. 02 on_time: Duration of high level, unit ms. 03 off_time: Duration of low level, unit ms. 04 pls_cnt: Pulse number.
Reply	B13,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B13,1,1000,1000,10 01 Set OUT1 to output 10 pulse, whose high level duration 1000ms, low level duration 1000ms.
Retrieve	UNSUPPORT

## B14 – Setting SMS Time Zone

Source	GPRS/COM/SMS
Description	<p>B14,&lt;tzone&gt;</p> <p>01 tzone: time zone, range [-12, 12].</p> <p>02 Default value of <u>tzone</u> is 0.</p> <p>03 When SMS time zone is set, all tracking/alarm SMS use <u>tzone</u> for date &amp; time.</p> <p>04 GPRS data uploading uses UTC-0 time zone.</p>
Reply	<p>B14,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	B14,-8
Retrieve	C04,B14

## B15 – Setting Sleep Mode

Source	GPRS/COM/SMS
Description	<p>B15,&lt;slp_mode&gt;,&lt;slp_wait_tmr&gt;</p> <p>01 slp_mode: sleep mode, 0—sleep is disabled, 1--normal sleep, 2--deep sleep.</p> <p>02 slp_wait_tmr: waiting time to sleep mode, unit s, default 300s.</p> <p>03 Normal sleep: turn off all the power except GSM module, terminal will be waked up by IO trigger, incoming phone-call or SMS.</p> <p>04 Deep sleep: turn off all the power supply, only wake up by IO trigger.</p>
Reply	<p>B15,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED –Processing failed.</p>
Example	B15,1
	01 Enable normal sleep mode, and waiting time to sleep mode is the default 300s.
Retrieve	C04,B15

## B16 – Setting Initial Mileage

Source	GPRS/COM/SMS
Description	<p>B16,&lt;init_mile&gt;</p> <p>01 init_mile: initial mileage, unit meter, default 0m.</p>
Reply	<p>B16,&lt;err_code&gt;</p> <p>01 err_code: error code.</p>

	OK – Succeed. UNSUPPORT – Command not supported. FAILED – Processing failed.
Example	B16 01 Set both initial mileage to 0m
Retrieve	C04,B16 01 The retrieved value is current mileage, not the setting ones.

## B17 – Clear Blind Data

Source	GPRS/COM/SMS
Description	B17,<data_type> 01 data_type: blind data type. 1 – GPRS Blind. 2 – SMS blind. 3 – Both GPRS and SMS blind.
Reply	B17,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B17,3 01 Clear both GPRS and SMS blind data.
Retrieve	UNSUPPORT

## B18 – Setting in-port Working Mode

Source	GPRS/COM/SMS
Description	B18,<input>,<valid_mode> 01 input: in-port selection, 1—IN1, 2—IN2, etc.. For S30, only IN1 is smart input, which can be set using the command 02 valid_mode: valid trigger mode, 0--low level valid, 1--high level valid.
Reply	B18,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Processing failed.
Example	B18,1,1 01 Set IN1 to high level valid mode.
Retrieve	C04,B18,<input> 01 input: in-port selection, the same as <u>input</u> field in setting command.

## B19 – Setting Circle geo-fence

Source	GPRS/COM/SMS
Description	<p>B19,&lt;index&gt;,&lt;flag&gt;,&lt;radium&gt;,&lt;lat&gt;,&lt;lon&gt;</p> <p>01 index: fence index, value 1~8, i.e.: 8 geo-fence can be set at most.</p> <p>02 flag: alarm flag</p> <ul style="list-style-type: none"> <li>flag=1: Trigger alarm when exit fence.</li> <li>flag=2: Trigger alarm when enter fence.</li> <li>flag=3: Trigger alarm both enter and exit fence.</li> </ul> <p>03 radium: radium of circle geo-fence, unit meter.</p> <p>04 lat: latitude of center point, decimal string format.</p> <p>05 lon: longitude of center point, decimal string format.</p> <p>06 When <u>lat</u> and <u>lon</u> are empty, current latitude and longitude is used, while GPS valid signal is needed.</p> <p>07 When <u>flag</u>, <u>radium</u>, <u>lat</u>, <u>lon</u> are empty, delete goe-fence specified by <u>index</u>; When <u>index</u>=0 or empty, delete all.</p>
Reply	<p>B19,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <ul style="list-style-type: none"> <li>OK – Succeed.</li> <li>UNSUPPORT – Command not supported.</li> <li>FAILED – Procession failed.</li> </ul>
Example	<p>B19,1,3,200</p> <p>01 Set the first circle geo-fence, centre point: current location, radium: 200m, output alarm both enter and exit fence.</p>
Retrieve	<p>C04,B19,&lt;index&gt;</p> <p>01 index: fence index, value 1~8, the same as <u>index</u> field in setting command.</p>

## B21 – Setting Fatigue Driving

Source	GPRS/COM/SMS
Description	<p>B21,&lt;drowsy_time&gt;,&lt;rest_time&gt;</p> <p>01 drowsy_time: Fatigue driving time, unit s, default 14400s.</p> <p>02 rest_time: Minimum rest time after fatigue driving, unit s, default 1200s.</p> <p>03 When <u>drowsy_time</u> is set to 0, fatigue driving alarm is disabled.</p> <p>04 The field <u>rest_time</u> can be empty, while the default value is used.</p> <p>05 When <u>drowsy_time</u> and <u>rest_time</u> are empty, both values are set to default.</p>
Reply	<p>B21,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <ul style="list-style-type: none"> <li>OK – Succeed.</li> <li>UNSUPPORT – Command not supported.</li> <li>FAILED – Procession failed.</li> </ul>
Example	B21

	01 Set fatigue driving time to the default value 14400s, and minimum rest time to the default value 1200s.
Retrieve	C04,B21

## B22 – Setting Maximum Parking Time

Source	GPRS/COM/SMS
Description	<p>B22,&lt;time&gt;</p> <p>01 time: Maximum parking time, unit s, default 0s, i.e. parking overtime alarm is disabled.</p> <p>02 When parking time exceeds preset value, a parking overtime alarm triggered.</p>
Reply	<p>B22,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Processing failed.</p>
Example	<p>B22,1200</p> <p>01 Set maximum parking time to 1200s.</p>
Retrieve	C04,B22

## B23 – Setting Alarm Action

Source	GPRS/COM/SMS
Description	<p>B23,&lt;alm-code&gt;,&lt;GPRS&gt;&lt;SMS&gt;</p> <p>01 alm-code: Alarm type, refer to Appendix –A.</p> <p>02 GPRS: Disable/enable GPRS uploading.</p> <p>03 SMS: Disable/enable SMS to SOS number.</p>
Reply	<p>B23,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B23,2,11</p> <p>01 Set action when SOS triggered:</p> <p>a Sending GPRS alarm data to platform.</p> <p>b Sending alarm SMS with C01 format to SOS number.</p>
Retrieve	<p>C04,B23,&lt;alm-code&gt;</p> <p>01 alm-code: Alarm type, refer to Appendix –A. The same as <u>alm-code</u> field in setting command.</p>

## B26 – Setting Alarm SMS Head String

Source	GPRS/COM/SMS
Description	<p>B26,&lt;alm-code&gt;,&lt;sms_string&gt;</p> <p>01 alm-code: Alarm type, refer to Appendix –A.</p> <p>02 sms_string: SMS head string, 16 bytes length at most.</p> <p>03 Refer to Appendix-A for default string.</p>
Reply	<p>B26,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED –Processing failed.</p>
Example	<p>B26,2,HELP</p> <p>01 Set SMS head string of SOS to “HELP”.</p>
Retrieve	<p>C04,B26,&lt;alm-code&gt;</p> <p>01 alm-code: Alarm type, refer to Appendix –A. The same as <u>alm-code</u> field in setting command.</p>

## B27 – Setting Parameters of Harsh Acceleration Alarm

Source	GPRS/COM/SMS
Description	<p>B27,&lt;speed_var&gt;,&lt;time_lmt&gt;</p> <p>01 speed_var: maximum acceleration speed, unit km/h, default 0.</p> <p>02 time_lmt: hard acceleration detection time, unit s, default 0.</p> <p>03 Refer to Appendix –A for <u>alm-code</u> of harsh accelerate</p>
Reply	<p>B27,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B27,40,2</p> <p>01 Set hard acceleration parameters: 40km/h speed variation within 2s.</p>
Retrieve	C04,B27

## B28 – Setting Parameters of Harsh Braking Alarm

Source	GPRS/COM/SMS
Description	<p>B28,&lt;speed_var&gt;,&lt;time_lmt&gt;</p> <p>01 speed_var: maximum decrease speed, unit km/h, default 0.</p> <p>02 time_lmt: hard braking detection time, unit s, default 0.</p> <p>03 When driving speed decrease beyond <u>speed var</u>, tracker triggers hard braking alarm.</p> <p>04 Refer to Appendix –A for <u>alm-code</u> of harsh brake</p>

Reply	B28,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	Refer to example in B27
Retrieve	C04,B28

## B29 – Setting Sensitivity of Motion Sensor

Source	GPRS/COM/SMS
Description	B29,<level> 01 level: sensitivity of motion sensor, value [0, 10]; the smaller value, the higher sensitivity
Reply	B29,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B29,5
Retrieve	C04,B29

## B31 – Setting SOS Number Attribute

Source	GPRS/COM/SMS
Description	B31,<sos-num>,<two-way-call>,<monitor>,<pos-sms> 01 Set SOS number attribute, refer to B11 command for SOS number setting. 02 sos-num: SOS index, value 1, 2, 3, which corresponds to SOS number set by B11 command. 03 two-way-call: attribute of two-way conversation. 04 monitor: attribute of monitor-mode conversation. 05 pos-sms: attribute of position SMS. 06 Description of attribute: two-way-call: tracker picks up incoming phone-call in two-way conversation mode. monitor: tracker picks up incoming phone-call in monitor mode. pos-sms: Tracker sends position SMS after incoming phone-call ends. Refer to C01 command for SMS format. 07 When both <u>two-way-call</u> and <u>monitor</u> are set, <u>monitor</u> is valid, i.e.: tracker picks up phone-call in monitor mode. 08 When the command string has only <u>sos-num</u> field, default attribute is set to corresponding SOS number.

	09 Default attribute of SOS number: <u><a href="#">two-way-call</a></u> and <u><a href="#">pos-sms</a></u> .
Reply	<p>B31,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <ul style="list-style-type: none"> <li>OK – Succeed.</li> <li>UN SUPPORT – Command not supported.</li> <li>FAILED – Procession failed.</li> </ul>
Example	<p>B31,1,1,1,1</p> <p>01 Set attribute of the first SOS number: tracker automatically picks up incoming phone-call under monitor mode, reply a position SMS.</p>
Retrieve	<p>C04,B31,&lt;sos-num&gt;</p> <p>01 sos-num: SOS index, value 1, 2, 3. The same as <u><a href="#">sos-num</a></u> field in setting command.</p>

## B33 – Setting Maximum Idle Time

Source	GPRS/COM/SMS
Description	<p>B33,&lt;idle_time&gt;</p> <p>01 idle_time: maximum idle time, unit: s, default 0s. This parameter should be greater than 300s.</p> <p>02 idle definition: ACC ON, but no speed, which means engine running under idle mode.</p> <p>03 When idle mode detected, tracker starts idle time counter, and triggers <u><a href="#">Idling Alarm</a></u> (<u><a href="#">alm_code=35</a></u>), if counter exceeds <u><a href="#">idle_time</a></u>.</p>
Reply	<p>B33,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <ul style="list-style-type: none"> <li>OK – Succeed.</li> <li>UN SUPPORT – Command not supported.</li> <li>FAILED – Procession failed.</li> </ul>
Example	<p>B33,600</p> <p>01 Set maximum idle time to 600s</p>
Retrieve	C04,B33

## B37 – Setting Digital Temperature Number

Source	GPRS/COM/SMS
Description	<p>B37</p> <p>01 Tracker supports multiple digital temperature sensors; When more than one sensors are installed, it is suggested to set sensor's number.</p> <p>02 When only one sensor is installed, tracker uses default #1 as sensor's number</p> <p>03 Method to set sensor's number:</p> <ul style="list-style-type: none"> <li>a Connect one sensor to tracker, send B37 command, tracker set sensor's number automatically, and reply setting result in command's reply</li> <li>b Disconnect the sensor, whose number has been set; Connect another sensor to tracker, use B37 command to set newly added sensor's number</li> </ul>

	<p>c Repeat the operation above, if there are more sensor</p> <p>d NOTE: When setting sensor's number, only one sensor is allowed to connect to tracker</p> <p>04 When sensors' numbers are set, tracker will arrange temperature data in the setting sequence</p> <p>05 It is suggested to reset number, when some sensors are removed.</p>
Reply	<p>B37,&lt;t_sensor_sn&gt;</p> <p>01 t_sensor_sn: Sensor's number which is set automatically</p> <p>[1,8] – Setting succeed, the value is the sensor's number</p> <p>[FULL] – The number of sensors exceed</p> <p>FAILED – Setting failed, error connection, or more than one sensor are connected</p>
Example	
Retrieve	UNSUPPORT

## B38 – Setting High/Low Temperature Alarm

Source	GPRS/COM/SMS
Description	<p>B38,&lt;t_sensor_sn&gt;,&lt;high_temp&gt;,&lt;low_temp&gt;</p> <p>01 t_sensor_sn: sensor's number, refer to B37 command; When one sensor is installed, t_sensor_sn==1</p> <p>02 high_temp: High temperature threshold, unit °C; If this field is empty, high temperature alarm is disabled.</p> <p>03 low_temp: Low temperature threshold, unit °C; If this field is empty, Low temperature alarm is disabled.</p> <p>04 When <u>t_sensor_sn</u>, <u>high temp</u>, <u>low temp</u> fields are empty, all sensors' high/low temperature alarm are disabled.</p> <p>05 Refer to Appendix-A for <u>alm-code</u> and <u>alm-para</u> of high/low temperature alarm</p>
Reply	<p>B38,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B38,1,-10,-20</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: -10°C, low temperature threshold: -20°C</p> <p>B38,1,-10</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: -10°C, low temperature threshold: disable</p>

	B38,1,, -20 01 Setting #1 sensor's parameters, high temperature threshold: disable, low temperature threshold: -20°C
	B38,1 01 Disable #1 sensor's high and low temperature alarm
Retrieve	C04,B38,<t_sensor_sn>

## B39 – Delete Digital Temperature Sensor

Source	GPRS/COM/SMS
Description	B39,<t_sensor_sn> 01 When multiple sensors are installed, and some ones need to be removed, this command can be used. In actual usage, remove sensor first, then send B39 command 02 t_sensor_sn: sensor's number, refer to B37 command; When one sensor is installed, t_sensor_sn==1; When <u>t_sensor_sn</u> field is empty, remove all sensors
Reply	B39,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	
Retrieve	UNSUPPORT

## B40 – Retrieve Temperature Sensor Data

Source	GPRS/COM/SMS
Description	B40 01 The command is used for testing after installation. Tracker replies all sensors' data.
Reply	B40,<tsensor1_temp> <tsensor2_temp>.... <tsensorN_temp> 01 The reply indicates the number of sensor, and sensors' data 02 N: The number of digital temperature sensor 03 tsensor[1,N]_temp: Temperature data, unit °C; Data is arranged by the number set by B37; ‘ ’ is used to separate neighboring data
Example	
Retrieve	UNSUPPORT

## B42 – Authorizing iButton Tag(s)

Source	GPRS/COM/SMS
Description	B42,<rfid_num1>,<rfid_num2>...<rfid_numN>

	<p>01 rfid_num[1,N]: iButton tag number to be authorized. For iButton tag, whose number is hexadecimal, use '#' in front</p> <p>02 To authorize iButton tags in batches, send B42 only, with <u><i>rfid num1, rfid num2 ... rfid numN</i></u> empty. After parsed the command, tracker will regard all read tags as authorized ones in 3 minutes. During this 3 minutes, tracker will not generate "Login", "Log Out" or "Illegal Login" alarm when tag(s) read.</p> <p>03 Refer to Appendix A for <u><i>alm-code</i></u> of "Login", "Log Out" and "Illegal Login".</p> <p>04 After authorized tag(s) set, tracker will generate "Login", "Log Out" or "Illegal Login" alarm when tag read; Refer to user guide for detail.</p> <p>05 If no tag(s) authorized, tracker will not generate "Illegal Login".</p>
Reply	<p>B42,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>    OK – Succeed.</p> <p>    UNSUPPORT – Command not supported.</p> <p>    FAILED – Procession failed.</p>
Example	<p>B42,1234567,1234568,1234569</p> <p>01 Authorize 3 iButton tags, whose number 1234567,1234568,1234569</p> <p> B42,1234567,1234568,#1234569</p> <p>01 Authorize 3 iButton tags, whose number 1234567,1234568,0x1234569</p> <p> B42</p> <p>01 Start batch tags authorizing, tracker regards tags, which are read in the following 3 minutes, as authorized ones.</p>
Retrieve	UNSUPPORT

## B43 – Delete Authorized iButton Tag(s)

Source	GPRS/COM/SMS
Description	<p>B43,&lt;ALL&gt;/&lt;rfid_num1&gt;,&lt;rfid_num2&gt;...&lt;rfid_numN&gt;</p> <p>01 rfid_num[1,N]: iButton tag number to be deleted. For iButton tag, whose number is hexadecimal, use '#' in front</p> <p>02 B43,ALL: Delete all authorized tag(s).</p> <p>03 To delete tags in batches, send B43 only, with <u><i>rfid num1, rfid num2...rfid numN</i></u> empty, tracker will delete tags, which are read in 3 minutes. During this 3 minutes, tracker will not generate "Login", "Log Out" or "Illegal Login" alarm when tag(s) read.</p>
Reply	<p>B43,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>    OK – Succeed.</p> <p>    UNSUPPORT – Command not supported.</p> <p>    FAILED – Procession failed.</p>
Example	<p>B43,1234567,1234568,1234569</p> <p>01 Delete 3 authorized RFID tags, whose number 1234567, 1234568, 1234569.</p>

	B43,1234567,1234568,#1234569 01 Delete 3 authorized RFID tags, whose number 1234567, 1234568, 0x1234569.
	B43 01 Start batch operation, tracker delete tags, which are read in the following 3 minutes.
Retrieve	UNSUPPORT

## B44 – Retrieve iButton Tag(s) Authorization

Source	GPRS/COM/SMS
Description	B44,<rfid_num1>,<rfid_num2>...<rfid_numN> 01 rfid_num[1,N]: iButton tag number to be retrieved. For iButton tag, whose number is hexadecimal, use '#' in front 02 Maximally, five tags are support in the retrieving operation
Reply	B44,<rfid_num1>:<aut1>,<rfid_num2>:<aut2>,...<rfid_numN>:<autN> 01 rfid_num[1,N]: iButton tag number to be retrieved. 02 aut[1,N]: Authorization status, 0~unauthorized, 1~ authorized
Example	
Retrieve	UNSUPPORT

## B80 – Setting Fuel Theft/Filling Alarm

Source	GPRS/COM/SMS
Description	B80,<ad-idx>,<theft-percentage>,<filling -percentage>,<use-acc> 01 The command is used for AD fuel sensor, such as AS10; Besides, it is valid on regular tank only at present. 02 ad-idx: AD channel which connects to fuel sensor, value 1/2; If <u>ad-idx==0</u> , disable fuel theft/filling function. 03 theft-percentage: Fuel theft percentage, unit %, tracker will send alarm when the fuel level decrement exceeds the setting value. If <u>theft-percentage==0</u> or field empty, disable fuel theft alarm. 04 filling-percentage: Fuel filling percentage, unit %, tracker will send alarm when the fuel level increment exceeds the setting value. If <u>filling-percentage==0</u> or filed empty, disable fuel filling alarm. 05 use-acc: Whether tracker connects to ACC or not. To get better calculation result, it is suggested to connect IN2 to ACC. If <u>use-acc</u> field empty, by default, it is regarded that ACC connected.
Reply	B80,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported.

	FAILED – Procession failed.
Example	<p>B80,1,5</p> <p>01 Enable fuel theft alarm calculated based on AD1; When fuel level decrement exceed 5%, tracker sends theft alarm</p> <p>02 Disable fuel filling alarm</p> <p>03 IN2 connects to ACC</p>
Retrieve	C04,B80

## B81 – Setting Fuel Level Alarm

Source	GPRS/COM/SMS
Description	<p>B81,&lt;ad-idx&gt;,&lt;low-percentage&gt;,&lt;high-percentage&gt;</p> <p>01 The command is used for AD fuel sensor, such as AS10; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx: AD channel which connects to fuel sensor, value 1/2; If <u>ad-idx==0</u>, disable fuel level detection.</p> <p>03 low-percentage: Percentage of low fuel level, unit %, tracker will send alarm when the fuel level is lower than the setting value. If <u>low-percentage==0</u> or field empty, disable low fuel level detection.</p> <p>04 high-percentage: Percentage of high fuel level, unit %, tracker will send alarm when the fuel level is higher than the setting value. If <u>high-percentage==0</u> or filed empty, disable high fuel level detection.</p>
Reply	<p>B81,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B81,1,15,80</p> <p>01 Enable low and high fuel level detection calculated based on AD1</p> <p>02 When fuel level is lower than 15%, tracker sends alarm</p> <p>03 When fuel level is higher than 80%, tracker sends alarm</p>
Retrieve	C04,B81

## B82 – Enable/Disable Fuel Consumption Statistics

Source	GPRS/COM/SMS
Description	<p>B82,&lt;ad-idx&gt;,&lt;use-acc&gt;,&lt;add-theft&gt;,&lt;clear&gt;</p> <p>01 The command is used for AD fuel sensor, such as AS10, original vehicle sensor; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx: AD channel which connects to fuel sensor, value 1/2; If <u>ad-idx==0</u>, disable fuel consumption statistics.</p> <p>03 use-acc: Whether tracker connects to ACC or not. To get better calculation result, it is</p>

	<p>suggested to connect IN2 to ACC. If <u>use-acc</u> field empty, by default, it is regarded that ACC connected.</p> <p>04 add-theft: 1-- The amount of oil reduced by theft is added to total fuel consumption (default); 0-- The amount of oil reduced by theft is excluded from total fuel consumption.</p> <p>05 clear: 0—Keep current fuel consumption data unchanged; 1—Clear current consumption data, and calculated from 0</p> <p>06 After fuel consumption statistics enabled, fuel consumption data is packed in <u>fuel consume</u> field in GPRS protocol.</p>
Reply	<p>B82,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B82,1,1,1</p> <p>01 Enable fuel consumption statistics calculated based on AD1; tracker connects to ACC via IN2; All amount, including fuel theft amount, will be statistics into total consumption; After commands sent, tracker clear current consumption data, and re-calculates from 0.</p>
Retrieve	<p>C04,B82</p> <p>Reply: B82,&lt;ad-idx&gt;,&lt;use-acc&gt;,&lt;add-theft&gt;</p>

## B90 – Reset Tracker or Module

Source	GPRS/COM/SMS
Description	<p>B90,&lt; select &gt;</p> <p>01 select: option</p> <p>=1: Reset tracker.</p> <p>=2: Reset GPS module.</p> <p>=3: Reset GSM module.</p>
Reply	<p>B90,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B90,1</p> <p>01 Reset tracker.</p>
Retrieve	UNSUPPORT

## B91 – Setting Parameters to Default

Source	GPRS/COM/SMS
Description	B91

	01 After command is set, all system parameters (except SMS password) are set to default.
Reply	B91,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B91
Retrieve	UNSUPPORT

## B94 – Turn on/off LED Display

Source	GPRS/COM/SMS
Description	B94,<led-on> 01 led-on: 1--turn on LED, 0--turn off LED. 02 Default, <u>led-on</u> =1.
Reply	B94,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B94 01 Set LED to default: turn on.
Retrieve	C04,B94

## B98 – Setting Lower Power Parameters

Source	GPRS/COM/SMS			
Description	B98,<low_pwr_v>,<low_recovery_v>,<control> 01 The command is used to set the parameters of low external power alarm 02 low_pwr_v: Low power alarm voltage, unit V; When external power input is lower than <u>low_pwr_v</u> , tracker sends “Low Ext-Power” alarm, and cuts off power supply if <u>control==1</u> , in order to protect auto battery. 03 low_recovery_v: External power recovery voltage, unit V; When external power input is higher than <u>low_recovery_v</u> , it is regards that external power is normal; tracker clears “Low Ext-Power” flag, and restore external power supply if <u>control==1</u> . 04 control: 1—cut off external power supply when external input is lower than <u>low_pwr_v</u> , and restore supply when external input higher than <u>low_recovery_v</u> , it is used to protect auto battery; 0(default)—Disable auto battery protection. 05 It is suggested to set parameters which ( <u>low_recovery_v - low_pwr_v</u> ) >= 0.5V 06 Default settings for 12V or 24V auto battery, as below table: <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td></td> <td>low_pwr_v</td> <td>low_recovery_v</td> </tr> </table>		low_pwr_v	low_recovery_v
	low_pwr_v	low_recovery_v		

		12V Auto Battery	11.5V	12.5V	
		24V Auto Battery	23.5V	24.5V	
Reply	<p>B98,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>				
Example	<p>B98,11.5,12.5</p> <p>01 Setting low external threshold to 11.5V, and recovery voltage to 12.5V, auto battery protection is disabled, tracker is always powered from external supply.</p> <p>B98,0,0,1</p> <p>01 Setting adaptive low external parameters, tracker judges voltage automatically, and cuts off when low external input.</p>				
Retrieve	C04,B98				

## C01 – Retrieve Position Information

Source	COM/SMS/GPRS
Description	<p>C01</p> <p>01 After command is set, tracker sends a position message.</p> <p>02 When alarm detected, tracker sends alarm SMS with C01 format automatically, to all SOS number(s).</p> <p>03 When command is sent via GPRS, tracker replies normal position data.</p>
Reply	<p>When command is sent via GPRS, the replied data is normal position package.</p> <p>When command is sent via SMS/COM</p> <p>&lt;string_head&gt;,yyyy-MM-dd hh:mm:ss, &lt;spd&gt;KM/h, &lt;gprs_st&gt;, &lt;gps_fix&gt;, EXPW:&lt;PST&gt;  <a href="http://maps.google.com/maps?f=q&amp;hl=en&amp;q=loc:&lt;Latitude&gt;,&lt;Longitude&gt;">http://maps.google.com/maps?f=q&amp;hl=en&amp;q=loc:&lt;Latitude&gt;,&lt;Longitude&gt;</a></p> <p>a string_head: SMS head string, for normal position data, <u>string_head</u> is empty, for alarm data, refer to Appendix-A for default string.</p> <p>b yyyy-MM-dd hh:mm:ss: current date &amp; time, which is effected by B14 command setting.</p> <p>c spd: current speed, unit km/h.</p> <p>d gprs_st: GPRS link status, value: “Connected” or “Disconnected”.</p> <p>e gps_fix: GPS signal status, ‘A’-fixed, ‘V’-not fixed.</p> <p>f PST: Status of ext-power input, “ON” -- ext-power is connected, “OFF” -- ext-power is disconnected.</p> <p>g Latitude, Longitude: Latitude and longitude of last position point.</p>
Example	C01
Retrieve	UNSUPPORT

## C02 – Retrieve Firmware/Hardware Version, SN, IMEI

Source	GPRS/COM/SMS
Description	C02
Reply	<p>Uploading data format:</p> <p>C02,&lt;IMEI&gt;,&lt;SN&gt;,&lt;fw_ver&gt;,&lt;hw_ver&gt;</p> <p>01 IMEI: IMEI of tracker.</p> <p>02 SN: Serial number of tracker.</p> <p>03 fw_ver: Firmware version.</p> <p>04 hw_ver: Hardware version.</p>
Example	C02
Retrieve	UNSUPPORT

## C03 – Retrieve Supply Power Status

Source	GPRS/COM/SMS
Description	C03
Reply	<p>Uploading data format:</p> <p>C03,&lt;extp_v&gt;,&lt;bat_v&gt;,&lt;bat_percentage&gt;</p> <p>01 extp_v: Voltage of ext-power, unit V. Charge supplier voltage for handheld tracker.</p> <p>02 bat_v: Voltage of internal battery.</p> <p>03 bat_percentage: Percentage of internal battery capacity.</p>
Example	C03
Retrieve	UNSUPPORT

## C04 – Retrieve Parameter Setting

Source	GPRS/COM/SMS
Description	<p>C04,&lt;cmd-code&gt;,&lt;query_para&gt;</p> <p>01 cmd-code: Command code to be retrieved.</p> <p>02 query_para: Query parameter; refer to chapters above for detail.</p>
Reply	<p>C04,&lt;cmd&gt;,&lt;cmd-para&gt;</p> <p>01 cmd-code: The same as sending command.</p> <p>02 cmd-para: Retrieved parameter string, the same format as setting command described in the above chapters.</p>
Example	Refer to chapters above.
Retrieve	UNSUPPORT

## C06 – Retrieve Basic Information of Tracker

Source	GPRS/COM/SMS
--------	--------------

Description	C06 01 Retrieve basic information of tracker in batch 02 The command is commonly used for GPRS linkage lost debug
Reply	C06,<GID>,<ip>,<port>,<TCP/UDP>,APN:<apn>,<apn_user>,<apn_pwd>;EXT:<ext_p>,BAT:<bat_v>;B03:<base_int>,<accoff_int>,<ns_int>;<ACC ON/OFF>,<Moving/STOP> 01 GID: Tracker ID for GPRS data, default IMEI 02 ip, port: Server setting in tracker 03 TCP/UDP: Transport protocol setting, string, value "TCP" / "UDP" 04 apn, apn_user, apn_pwd: APN setting in tracker 05 ext_p: Voltage of external power supply, unit V 06 bat_v: Voltage of internal battery, unit V 07 base_int, accoff_int, ns_int: GPRS uploading interval for normal situation, for ACC OFF, for parking status, which is the same as B03 setting 08 ACC ON/OFF: Current ACC status, string, value "ACC ON" / "ACC OFF" 09 Moving/STOP: Current motion status, string, value "Moving" / "STOP"
Example	Command: C06 Reply: C06,861694033095389,47.88.35.165:10502,TCP;APN:CMNET,,;EXT:12.00V,BAT:4.17V;B03:100,0,0,ACC OFF,Stop
Retrieve	UNSUPPORT

## Appendix A – Alarm code and alarm parameter

The following table describes the relationship of alm-code and alm-para in GPS Position/Alarm data:

alm-code	alm-para	Description	SMS Head String
1	NULL	Distance tracking	Distance
2	NULL	Input1 active	SOS
3	NULL	Input1 inactive	IN1 Inactive
4	NULL	Input2 active	IN2
5	NULL	Input2 inactive	IN2 Inactive
14	Ext-power voltage, unit V	Ext-power low	Low Ext-Power
15	NULL	Ext-power lost	Ext-Power Cut
16	NULL	Ext-power re-connect	Ext-Power On
17	Battery voltage, unit V	Internal battery low	Low Battery
18	NULL	Speeding alarm	Speeding
23	NULL	Harsh accelerate	Harsh Accelerate
24	NULL	Harsh braking	Harsh Braking
25	NULL	Enter sleep	Enter Sleep
26	NULL	Exit sleep	Wake Up
27	NULL	Fatigue driving	Fatigue Driving
28	NULL	Fatigue relieve	Fatigue Relieve
29	NULL	Parking overtime	Parking Overtime
33	Hexadecimal character: bit[7:4]: geo-fence type: 0 - Circle fence 1 - Polygon fence bit[3:0]: index of fence	Exit geo-fence	Exit Fence
34	The same as “Exit geo-fence”	Enter geo-fence	Enter Fence
35	NULL	Idling Alarm	Idling Alarm
37	NULL	Login	Login
38	NULL	Log Out	Log Out
39	NULL	Illegal Login	Illegal Login
40	sn sn: Digital temperature sensor's number, refer to B37	High Temperature	High Temperature
41	sn sn: Digital temperature sensor's number, refer to B37	Low Temperature	Low Temperature

44	NULL	Fuel Theft Alarm	Fuel Theft
45	NULL	Fuel Filling Alarm	Fuel Filling
46	NULL	Low Fuel Level Alarm	Fuel Level Low
47	NULL	High Fuel Level Alarm	Fuel Level High